

Test instructions

Push button Triple Lock Buckle 28mm

Background:

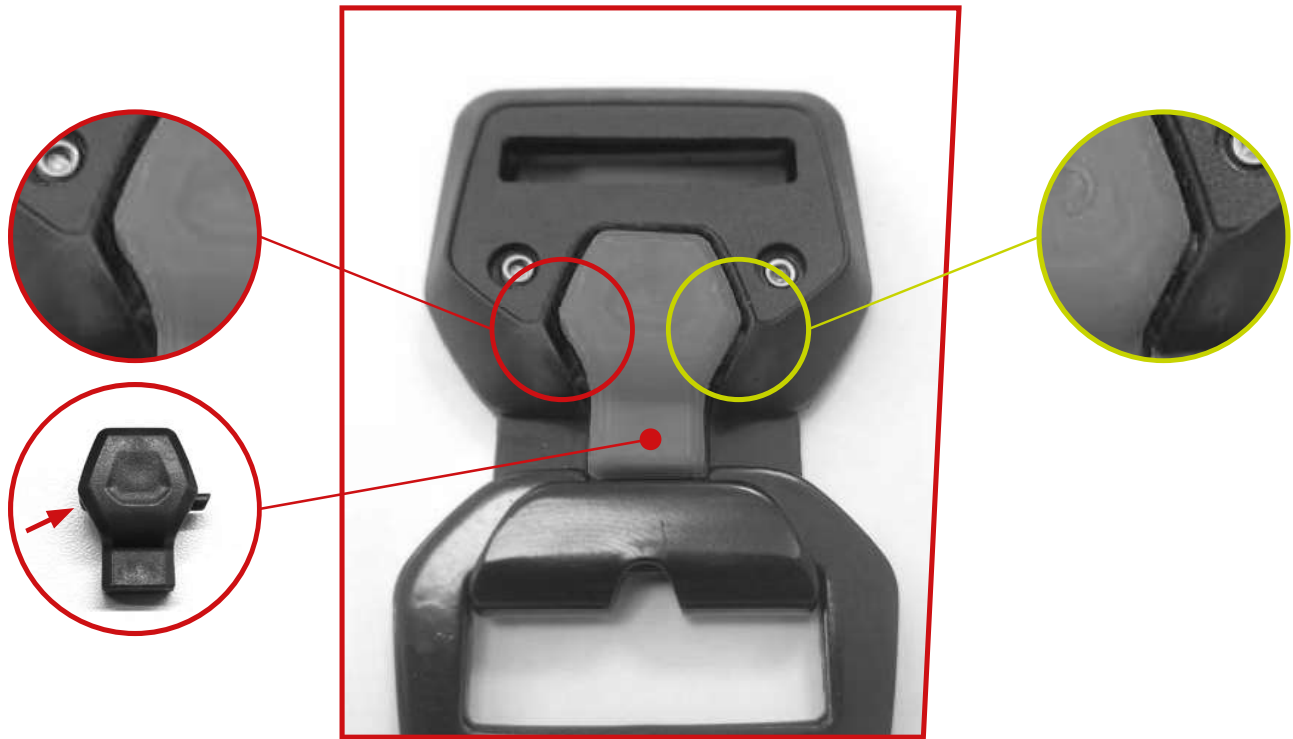
Triple lock buckles were found with damaged push buttons.

This test instruction describes what to look for when testing the push button of a triple lock buckle.

PINS ARE IN PLACE ON BOTH SIDES:



OK

PIN MISSING ON ONE SIDE:**PIN IS MISSING**

If a buckles is suspected to have a broken pin, this can be verified by applying slight pressure on the push button from behind using a tool like a Ballpoint pen, screwdriver or similar. If both pins are intact, the push button cannot be lifted out of the housing by applying slight pressure. If the pin is broken, the push button can be lifted out of the housing and a break will be visible.

If a buckles has a broken pin, the harness should no longer be used. Please contact EDELRID for further assistance:
service@edelrid.de.

